


Start

Voice Remote

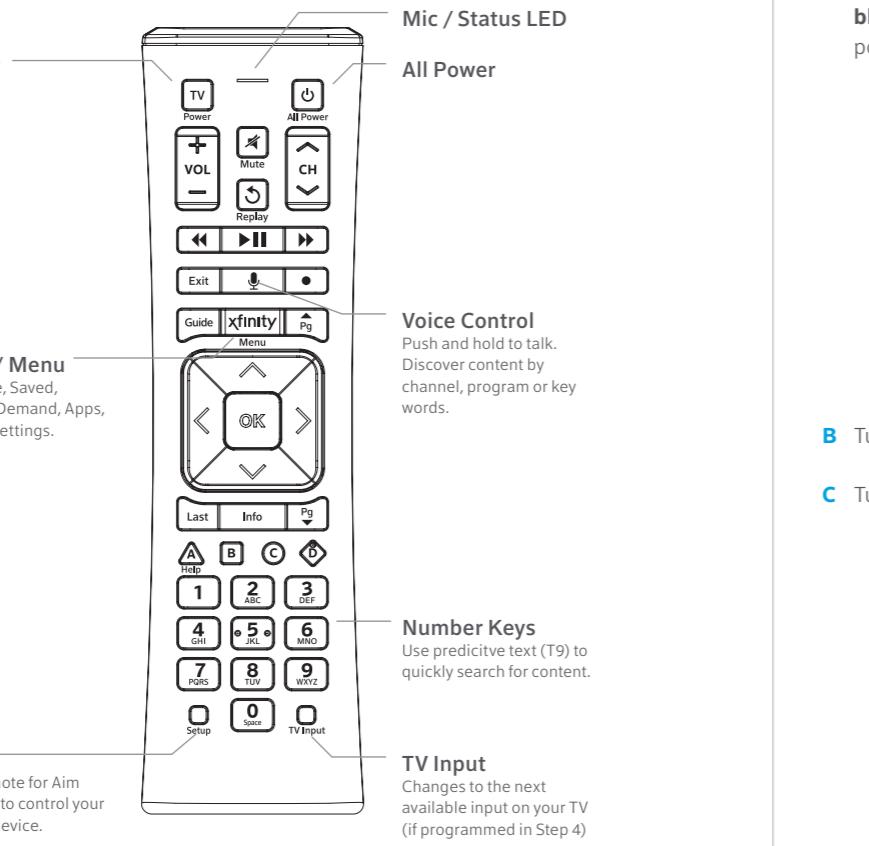

1 Meet Your Remote

2 Turn On Your Remote

Your remote arrives with the AA batteries already installed, but not activated. Here is how to power it on for the first time.

- A Pick up your remote and remove the "Pull" tab (on back) by **pulling away** from the remote. The Status LED will **blink green** four times as the remote powers up (about 5 seconds).



B Turn on your **TV**.

C Turn on your **set-top box**.



Once the code is correctly entered, your XFINITY Remote is paired with the device.

Not working? Make sure the battery tab from your remote is removed, your TV is on and you are entering the correct 3-digit code on your TV screen.

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.


3 Pair Your Remote for Voice Control

Use voice control to search for networks and shows, set DVR recordings, and get recommendations. See Step 5 of this guide for examples.

- A Press and hold the **Setup** button (about 3 seconds) until the Status LED changes from **red to green**.



- B Press and hold the **Setup** button (about 3 seconds) until the Status LED changes from **red to green**.

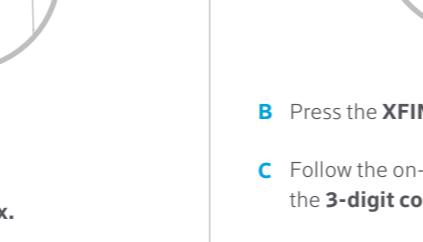

B Press the **XFINITY** button.

C Follow the on-screen instructions to enter the **3-digit code** that appears.

Not working? Try the second code listed. Still not working? Visit xfinity.com/remotes for a complete list of codes or use the My Account app for mobile (iOS/Android) or X1.

C Enter the **first** 5-digit code for your TV manufacturer. The Status LED should **flash green twice**.

Not working? Have an Audio Receiver or Sound Bar? If you would like to setup your remote to control your audio device or sound bar, visit xfinity.com/remotes.




D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

4 Control Your TV's Power and Volume

- A Using the list on the right, find the first **5-digit code** for your TV manufacturer.

Popular TV Manufacturer Codes

LG	10178, 11265
Panasonic	10051, 10250
Samsung	10812, 10060
Sanyo	10154, 10159
Sony	10000, 11100
Sharp	10093, 10165
Toshiba	10156, 11156
Vizio	11758, 11756

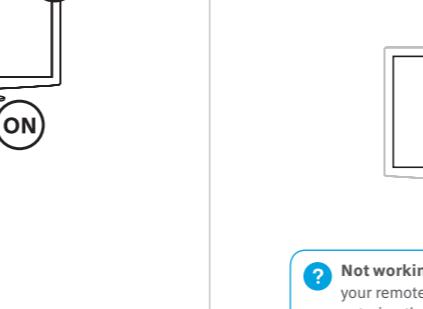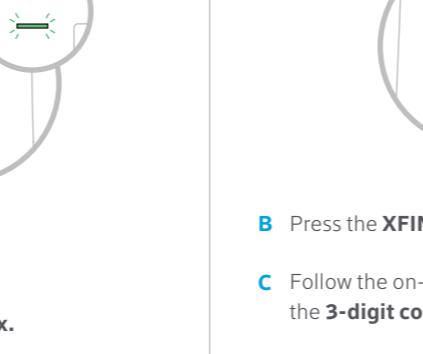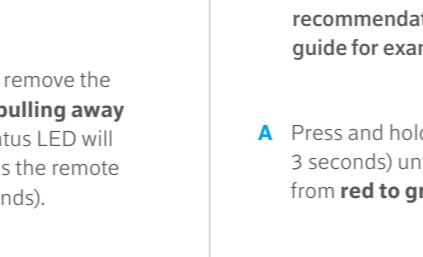


D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.


5 Test Voice Control

Once your remote is paired with your set-top box, you can use voice control.

- A Press and hold the **Voice button** until you hear the audio tone.

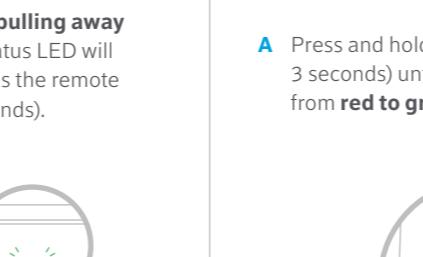


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

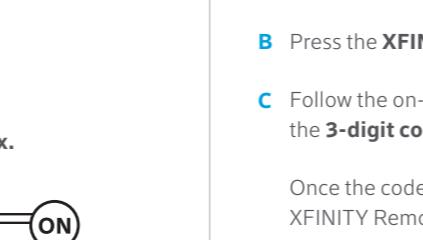


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

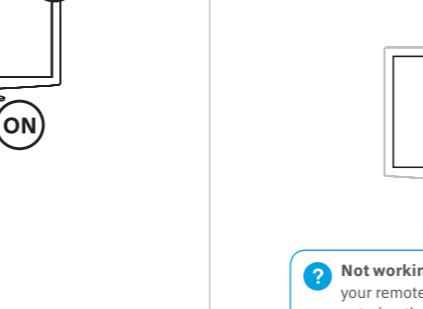

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

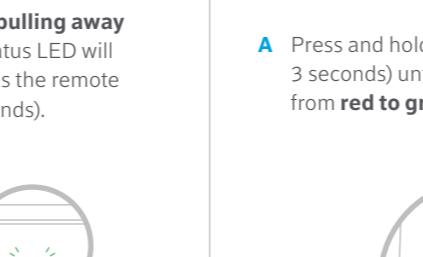


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

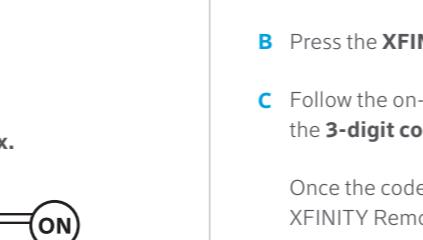


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

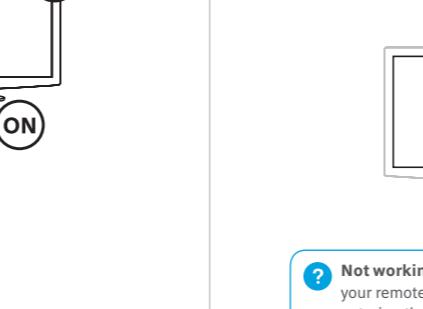

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

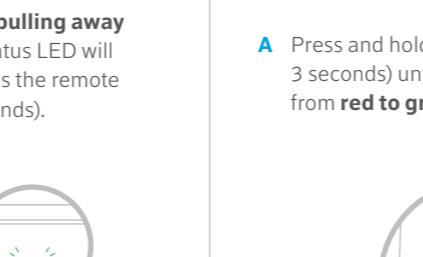


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

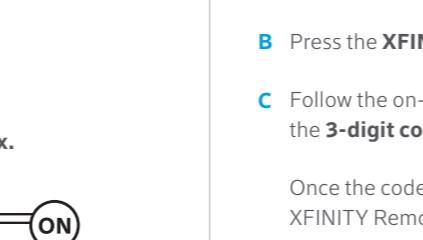


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

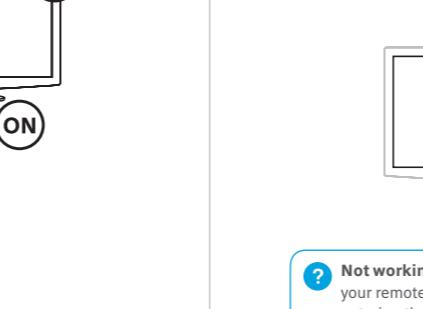

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

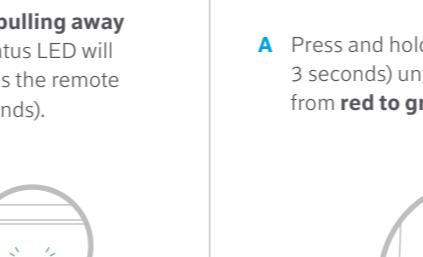


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

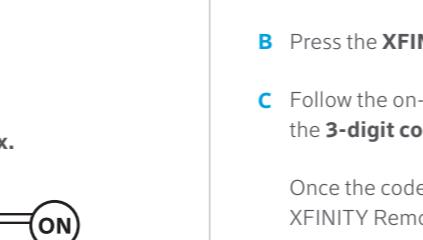


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

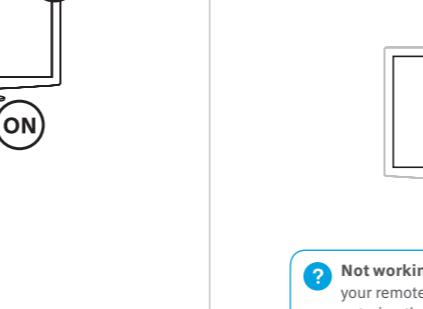

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

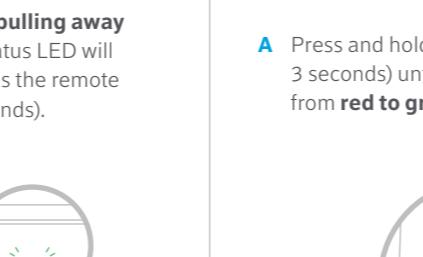


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

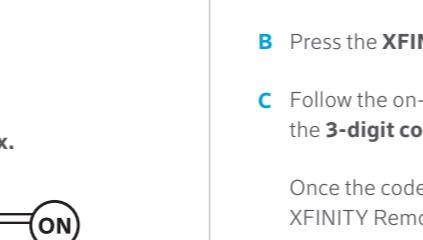


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

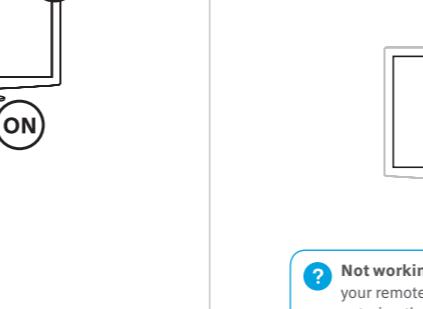

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

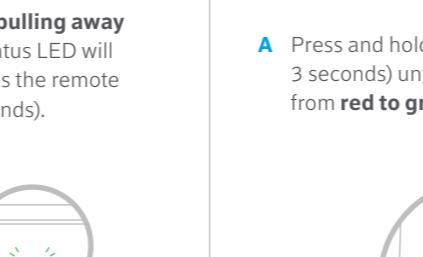


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

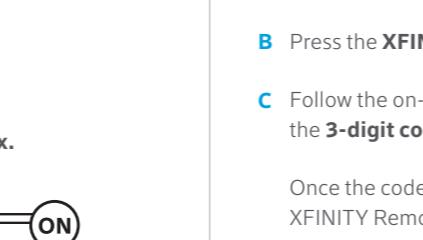


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

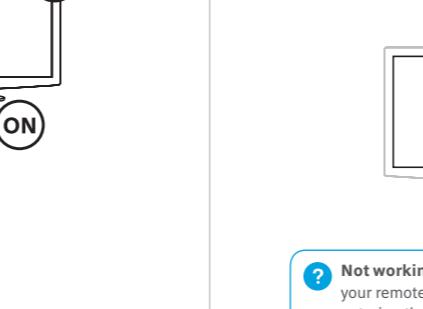

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

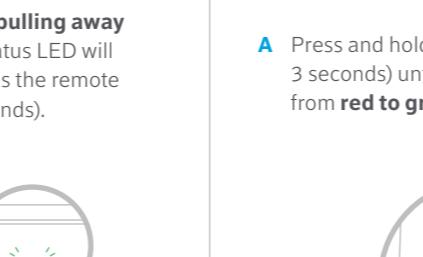


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

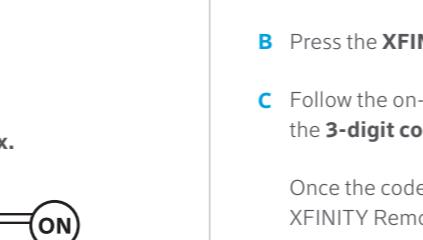


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

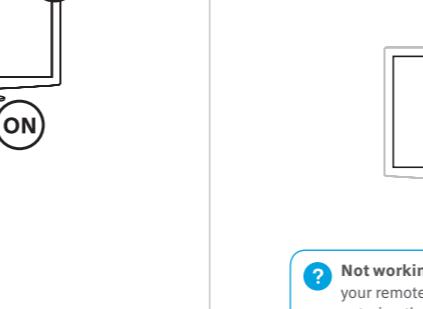

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

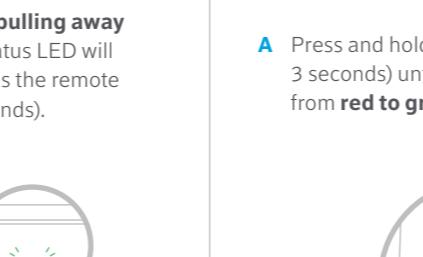


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

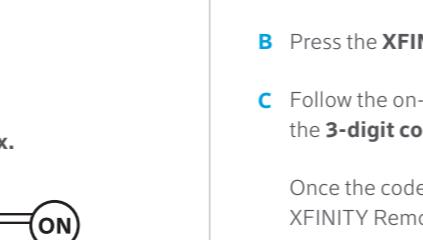


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

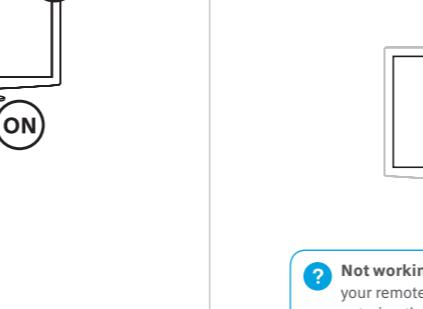

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

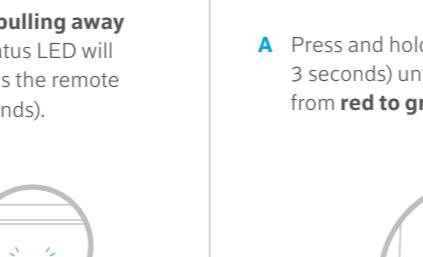


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

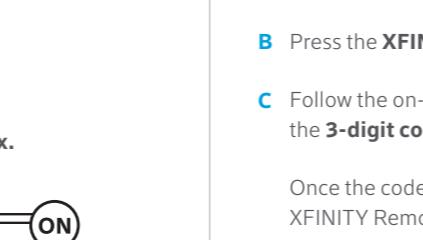


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

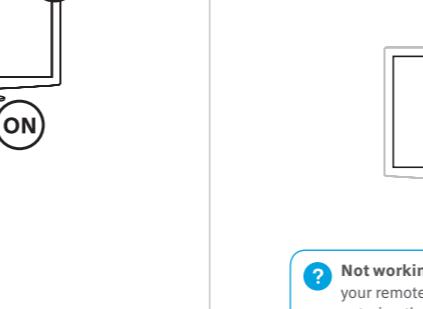

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

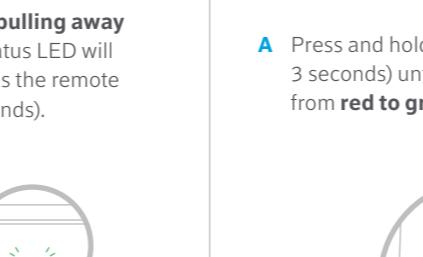


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

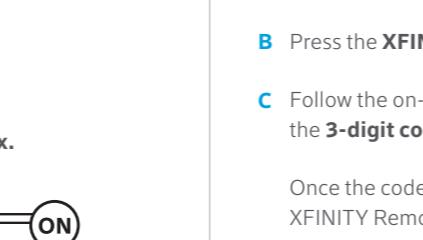


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

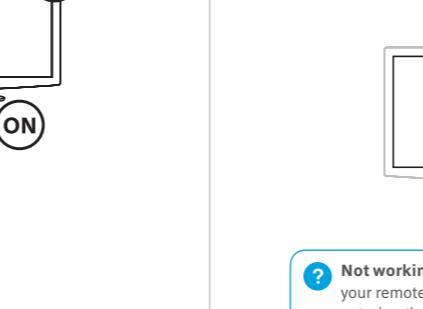

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

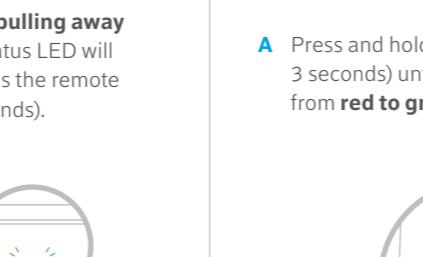


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

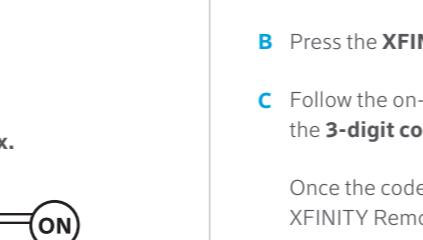


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

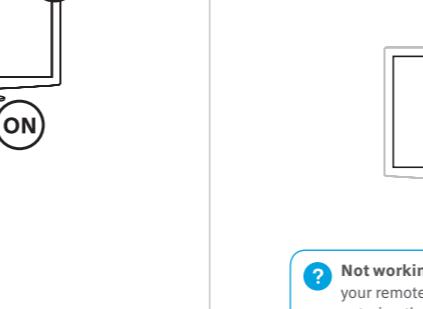

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

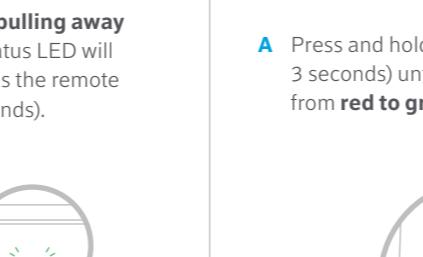


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

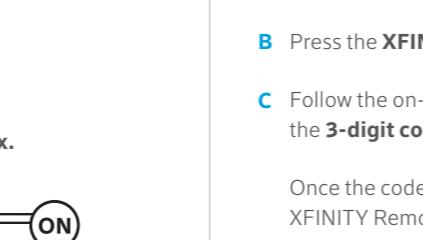


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

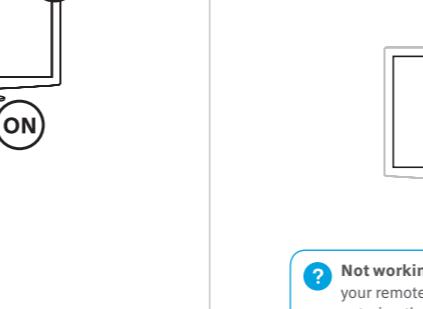

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

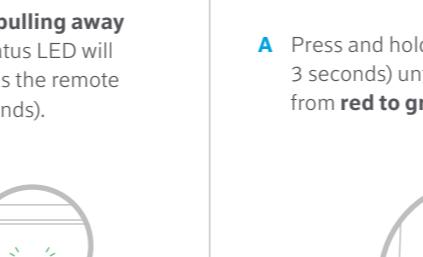


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

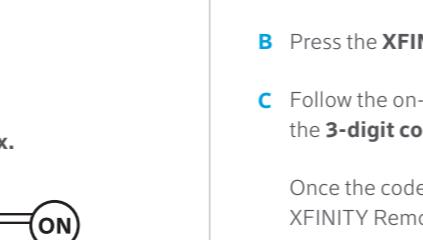


B Press the **XFINITY** button.


C Follow the on-screen instructions to enter the **3-digit code** that appears.

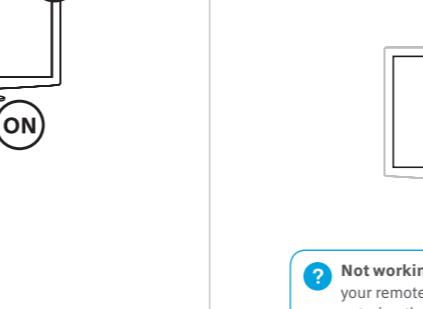

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

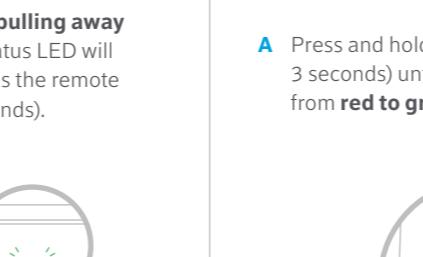


- B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be **solid blue** while you speak your command.

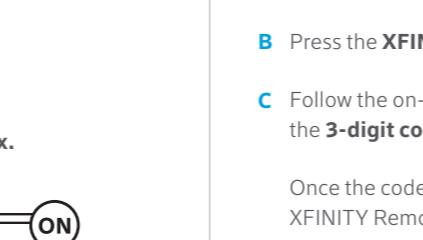

B Press the **XFINITY** button.

C Follow the on-screen instructions to enter the **3-digit code** that appears.

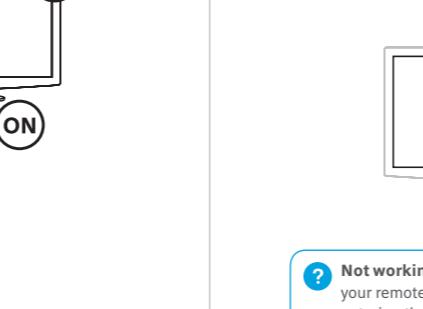


D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off</b**

Inicio

Control remoto por voz

xfinity

1 Conozca su control remoto

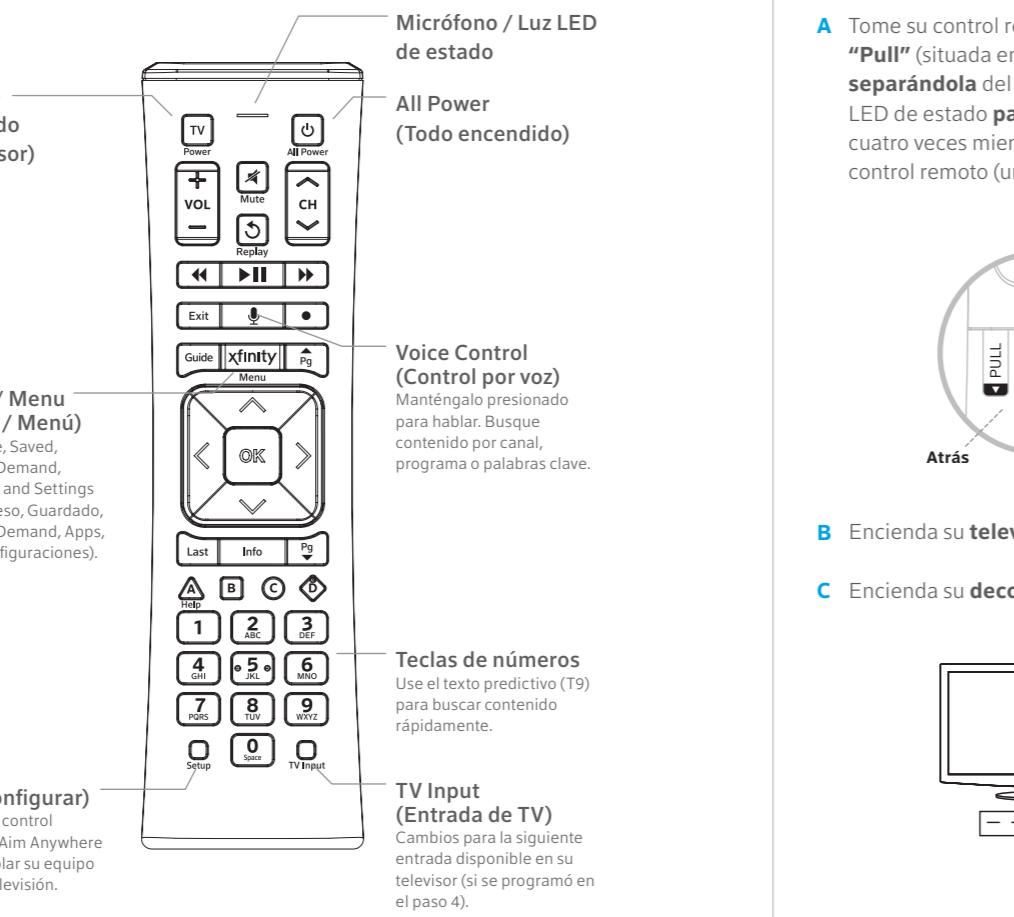

2 Encienda su control remoto

Su control remoto se le entrega con baterías AA ya instaladas, pero no activado. A continuación se muestra cómo debe encenderlo la primera vez.


- A** Tome su control remoto y quite la **pestaña "Pull"** (situada en la parte posterior) **separándola** del control remoto. La luz LED de estado **parpadeará en verde** cuatro veces mientras se enciende el control remoto (unos 5 segundos).



- B** Encienda su **televisor**.
C Encienda su **decodificador**.



Una vez que el código se haya ingresado correctamente, su control remoto de XFINITY quedará sincronizado con el aparato.

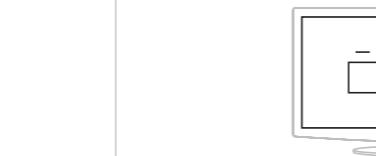

- ¿No funciona?** Asegúrese de que ha retirado la pestaña junto a las baterías de su control remoto, su televisor está encendido y ha ingresado el código de 3 dígitos correctamente en la pantalla del televisor.

3 Conecte su control remoto para utilizarlo con la voz

Utilice el control por voz para buscar cadenas y shows, programar grabaciones en su DVR y obtener recomendaciones. Vea el paso 5 de esta guía para ver ejemplos.

- A** Mantenga presionado el botón **Setup** (Configurar) unos 3 segundos, hasta que la luz LED de estado cambie de **rojo a verde**.



- B** Mantenga presionado el botón **Setup** (Configurar) unos 3 segundos, hasta que la luz LED de estado cambie de **rojo a verde**.




- B** Presione el botón **XFINITY**.
C Siga las instrucciones en pantalla para ingresar el **código de 3 dígitos** que aparece.



Si su código no está en la lista o le gustaría controlar un equipo de audio, visite es.comcast.com/remotes.

C Ingrese el **primer** código de 5 dígitos correspondiente al fabricante de su televisor. La luz LED de estado debe **parpadear en color verde dos veces**.

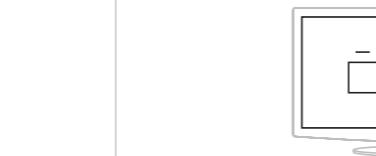

¿No funciona? Pruebe el segundo código de la lista. ¿Aún no funciona? Visite es.comcast.com/remotes para obtener una lista completa de códigos o use My Account App (Mi cuenta) para equipo móvil (iOS/Android) o X1.

¿Tiene un receptor de audio o barra de sonido? Si quiere configurar su control remoto para controlar su equipo de audio o barra de sonido, visite es.comcast.com/remotes.

4 Controle el encendido y el volumen del televisor

- A** En la lista de la derecha, encuentre el primer código de **5 dígitos** para el fabricante de su televisor.

Códigos de fabricantes de televisores más comunes

LG 10178, 11265

Panasonic 10051, 10250

Samsung 10812, 10060

Sanyo 10154, 10159

Sony 10000, 11100


Sharp 10093, 10165

Toshiba 10156, 11156

Vizio 11758, 11756



- D** Verifique que el código ha sido aceptado usando su control remoto para ajustar el **volumen** y **encender y apagar** el televisor.

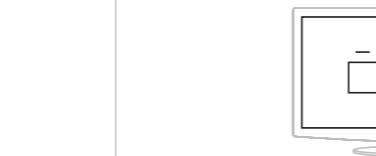

- ¿No funciona?** Asegúrese de presionar el botón de Voz mientras habla y suéltelo cuando termine.

5 Control por voz de prueba

Una vez que su control remoto esté conectado con su decodificador, puede usar el control por voz.


- A** Mantenga presionado el **botón de voz** hasta que escuche un tono.




- B** Diga un comando de voz al control remoto mientras continúa presionando el botón. Pruebe con una de las sugerencias a continuación. La luz LED de estado estará **fija en azul** mientras dice el comando.



- C** Suelte el **botón de Voz** cuando termine el comando. Mire en su televisor para ver los resultados del comando de voz.

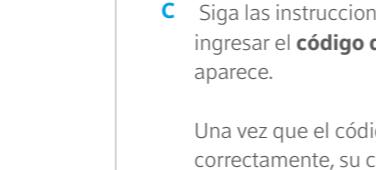


WATCH CNBC (MIRAR CNBC)
FIND The Voice (BUSCAR The Voice)
SHOW ME all Eagles games (MOSTRARME todos los partidos de los Eagles)
SHOW ME all kids movies on HBO (MOSTRARME todas las películas para niños en HBO)
RECORD The Biggest Loser (GRABAR The Biggest Loser)
LAUNCH Pandora (INICIAR Pandora)
GUIDE (GUÍA)
WHAT SHOULD I WATCH?
(¿QUE PUEDO VER?)
WHAT'S ON NOW?
(¿QUÉ HAY PARA VER?)

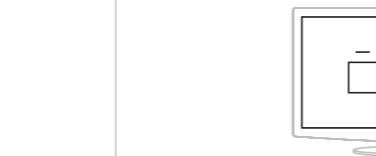

- ¿No funciona?** Asegúrese de que ha retirado la pestaña junto a las baterías de su control remoto, su televisor está encendido y ha ingresado el código de 3 dígitos correctamente en la pantalla del televisor.

D Verifique que el código ha sido aceptado usando su control remoto para ajustar el **volumen** y **encender y apagar** el televisor.

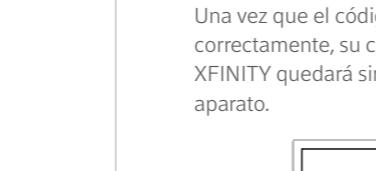

- ¿No funciona?** Asegúrese de presionar el botón de Voz mientras habla y suéltelo cuando termine.

- ¿No funciona?** Asegúrese de presionar el botón de Voz mientras habla y suéltelo cuando termine.

Need help ?

Visit xfinity.com/remotes

Use the My Account app for Mobile (iOS/Android) or X1

Keep for future reference, but if you decide to toss, please recycle.

Quick Start Guide v1.0
1698397C Printed in China