

Start

Voice Remote

1 Meet Your Remote

Mic / Status LED

All Power

TV Power

Voice Control
Push and hold to talk. Discover content by channel, program or key words.

Rogers / Menu
Access Guide, Saved, Video On demand, Apps, Search and Settings.


Number Keys
Use predictive text (T9) to quickly search for content.

TV Input
Changes to the next available input on your TV (if programmed in Step 4).


Setup
Program remote for Aim Anywhere or to control your TV or audio device.

2 Turn On Your Remote

Your remote arrives with the AA batteries already installed, but not activated. Here is how to power it on for the first time.

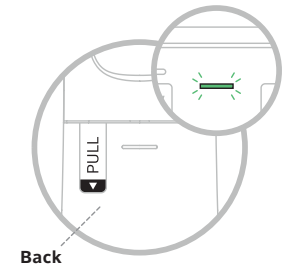


A Pick up your remote and remove the "Pull" tab (on back) by pulling away from the remote. The Status LED will blink green four times as the remote powers up (about 5 seconds).

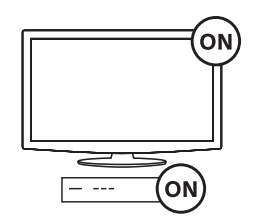


B Turn on your TV.
C Turn on your set-top box.

3 Pair Your Remote for Voice Control

Use voice control to search for networks and shows, set DVR recordings, and get recommendations. See Step 5 of this guide for examples.

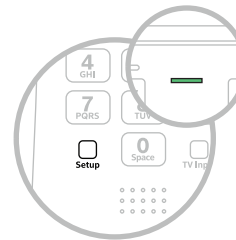


A Press and hold the Setup button (about 3 seconds) until the Status LED changes from red to green.

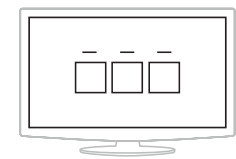


B Press the Rogers button.
C Follow the on-screen instructions to enter the 3-digit code that appears.
Once the code is correctly entered, your Rogers remote is paired with the device.

Not working? Make sure the battery tab from your remote is removed, your TV is on and you are entering the correct 3-digit code on your TV screen.


4 Control Your TVs Power and Volume

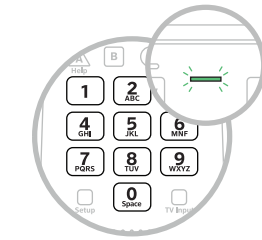

A Using the list on the right, find the first 5-digit code for your TV manufacturer.

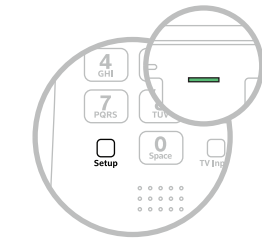

B Press and hold the Setup button (about 3 seconds) until the Status LED changes from red to green.

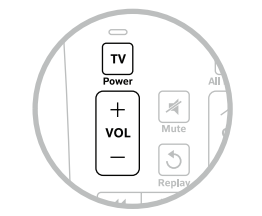

C Enter the first 5-digit code for your TV manufacturer. The Status LED should flash green twice.

D Verify that the code was accepted by using your remote to adjust volume and turn the TV on and off.

Not working? Try the second code listed. Still not working? Visit urcsupport.com/rogers for a complete list of codes or use the My Account app for mobile (iOS/Android) or X1.

Popular TV Manufacturer Codes

Emerson	11864, 10171
Insignia	12049, 11641
JVC	11774, 12321
LG	12731, 10178
Magnavox	10054, 12597
Panasonic	11480, 10051
Philips	11867, 12597
RCA	10047, 11447
Samsung	12051, 10702
Sanyo	10154, 11142
Sharp	10093, 12360
Sony	10810, 11685
Toshiba	10156, 11524
VIZIO	11758, 12707
Westinghouse	11712, 13579

If your code isn't listed or you would like to control an audio device, visit urcsupport.com/rogers

Have an Audio Receiver or Sound Bar? If you would like to setup your remote to control your audio device or sound bar, visit urcsupport.com/rogers

5 Test Voice Control

Once your remote is paired with your set-top box, you can use voice control.



A Press and hold the Voice button until you hear the audio tone.

B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions below. The Status LED will be solid blue while you speak your command.

C Release the Voice button when your command is complete. Look at the TV for the results of your voice command.

- WATCH Sportsnet
- FIND House of Cards
- SHOW ME Toronto Maple Leaf Games
- Show me Viceland
- Record Modern Family
- Kids Zone
- Sports App
- What Should I watch?
- What's on Now?

Not working? Make sure you're pressing the Voice button while you speak into the remote, and release it when complete.

For Industry Canada
Industry Canada Statement
This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Pour Industrie Canada
Énoncé d'Industrie Canada
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Need help?
Visit urcsupport.com/rogers

Keep for future reference, but if you decide to toss, please recycle.
Quick Start Guide v.1.0
1698397C Printed in China