


Start

Voice Remote




1 Meet Your Remote

Your remote arrives with the AA batteries already installed, but not activated. Here is how to power it on for the first time.

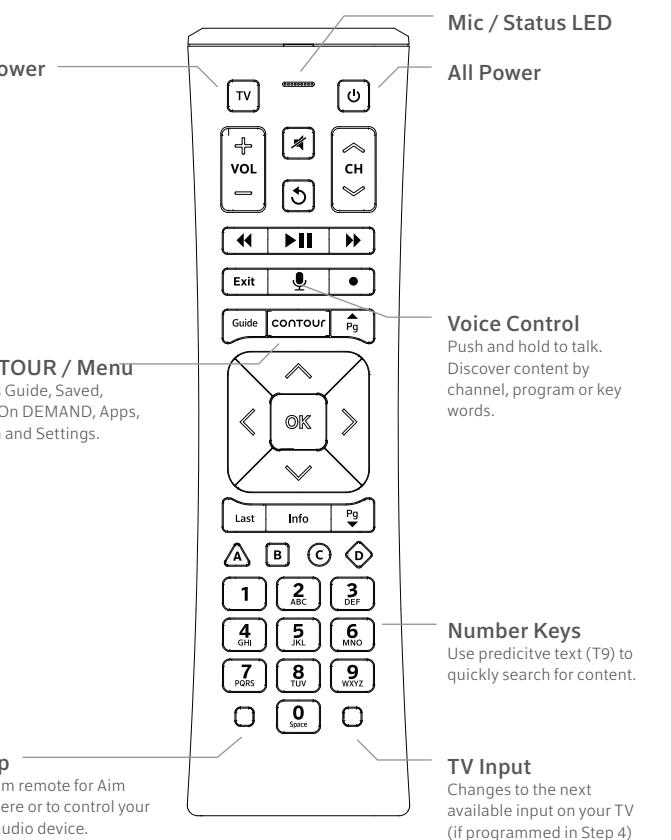


2 Turn On Your Remote

Your remote arrives with the AA batteries already installed, but not activated. Here is how to power it on for the first time.

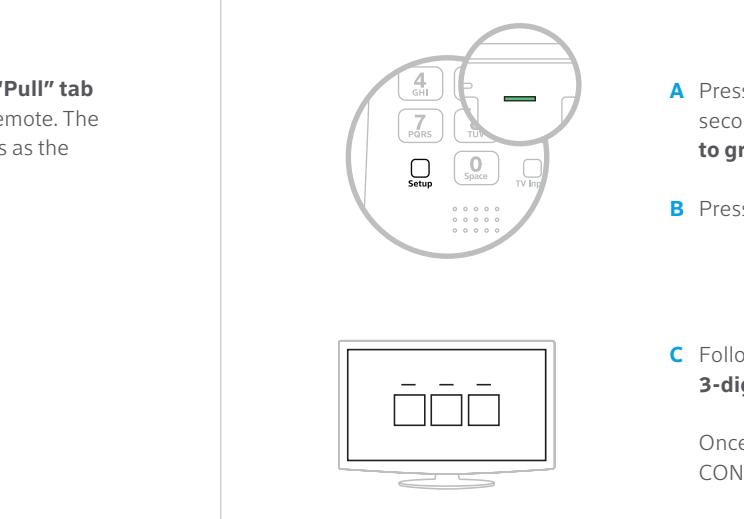


3 Pair Your Remote for Voice Control

Use voice control to search for networks and shows, set DVR recordings, and get recommendations. See Step 5 of this guide for examples.

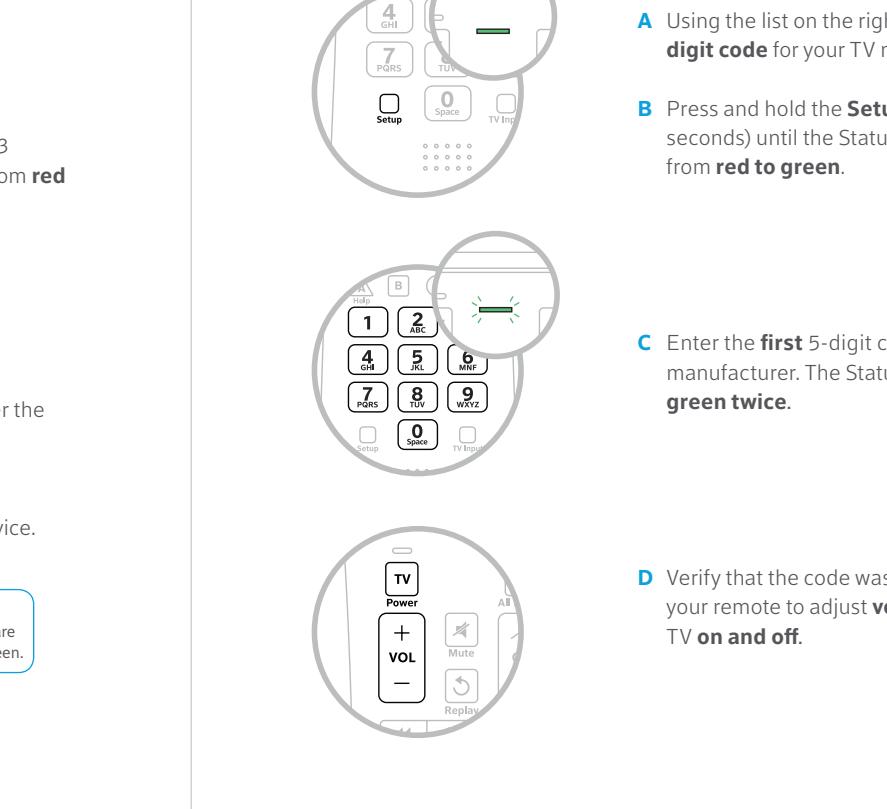

4 Control Your TV's Power and Volume

Once your remote is paired with your set-top box, you can use voice control.

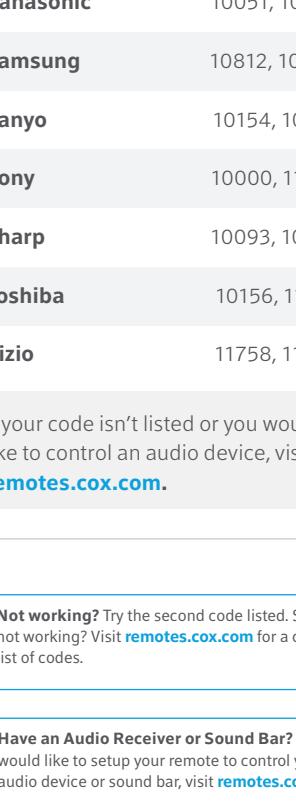

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced remote control /TV technician for help.

It is strongly recommended that the TV be plugged into a separate wall outlet.

The user is cautioned that changes and modifications made to this equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

"Caution": Exposure to Radio Frequency Radiation. Antenna shall be mounted in such a manner to minimize the potential for human contact during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.


Radio Exposure Statement: This equipment complies with the FCC radiation exposure limits set forth for devices operating in an uncontrolled environment. This equipment should be operated with a minimum distance of 2 cm between the radiator and front of face. This equipment should not be placed directly on the ear when the speaker is active.

Inicio

Control remoto por voz



1 Conozca su control remoto

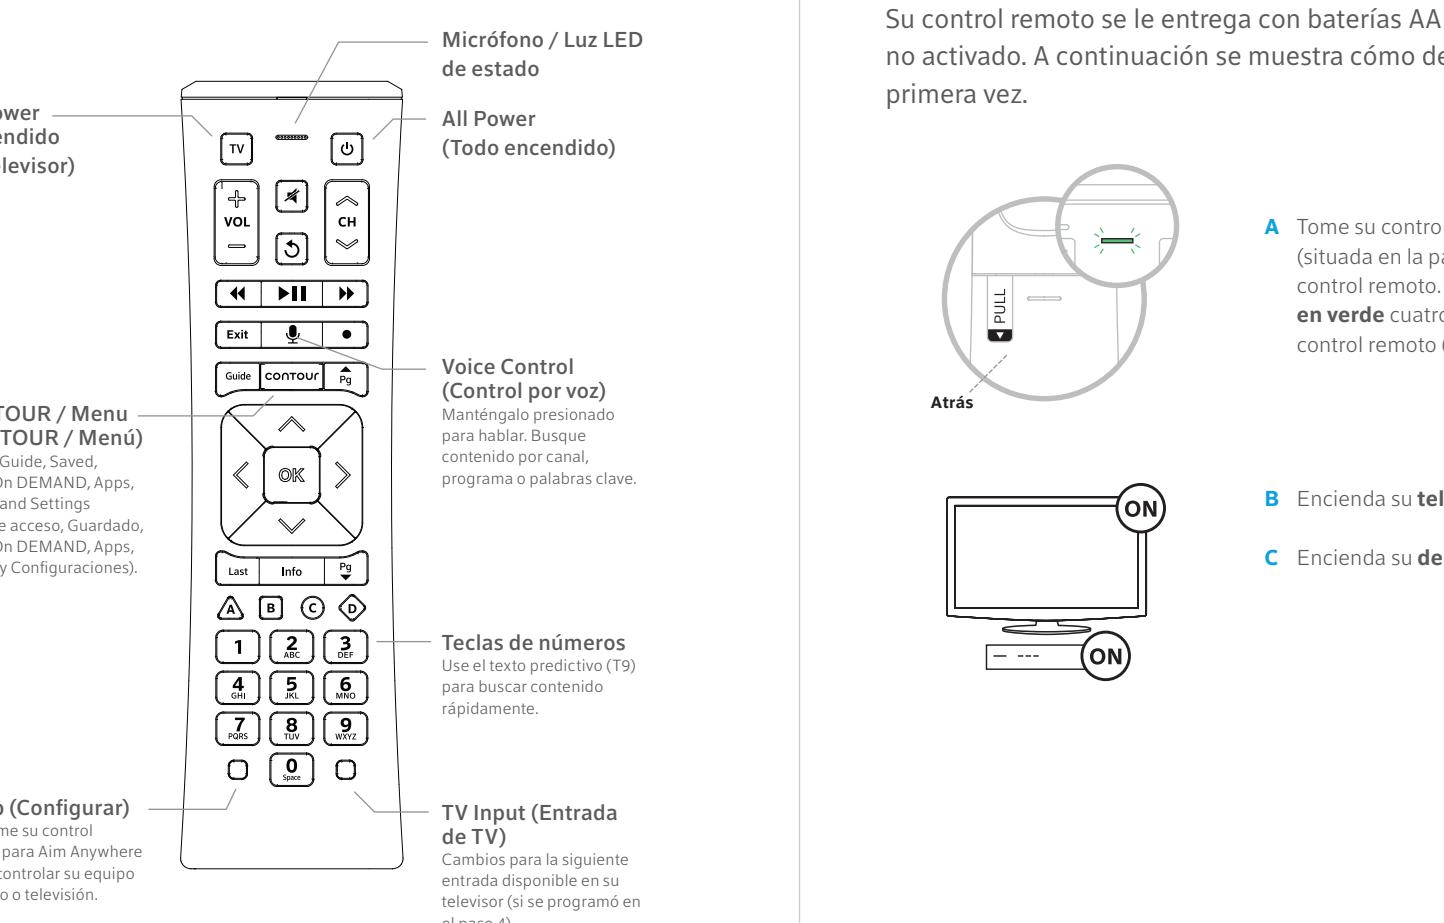

2 Encienda su control remoto

Su control remoto se le entrega con baterías AA ya instaladas, pero no activado. A continuación se muestra cómo debe encenderlo la primera vez.



- A Tome su control remoto y quite la **pestaña "Pull"** (situada en la parte posterior) **separándola** del control remoto. La luz LED de estado **parpadeará en verde** cuatro veces mientras se enciende el control remoto (unos 5 segundos).

- B Encienda su **televisor**.

- C Encienda su **decodificador**.

3 Conecte su control remoto para utilizarlo con la voz

Utilice el control por voz para buscar cadenas y shows, programar grabaciones en su DVR y obtener recomendaciones. Vea el paso 5 de esta guía para ver ejemplos.

- A En la lista de la derecha, encuentre el primer código de **5 dígitos** para el fabricante de su televisor.
- B Mantenga presionado el botón **Setup** (Configurar) unos 3 segundos, hasta que la luz LED de estado cambie de **rojo a verde**.
- C Presione el botón **CONTOUR**.
- D Ingrese el **primer** código de 5 dígitos correspondiente al fabricante de su televisor. La luz LED de estado debe **parpadear en color verde dos veces**. Una vez que el código se haya ingresado correctamente, su control remoto de CONTOUR quedará sincronizado con el aparato.
- E ¿No funciona? Pruebe el segundo código de la lista. ¿Aún no funciona? Visite remotes.cox.com para obtener una lista completa de códigos.
- F ¿No funciona? Asegúrese de que ha retirado la pestaña junto a las baterías de su control remoto, su televisor está encendido y ha ingresado el código de 3 dígitos correctamente en la pantalla del televisor.
- G ¿Tiene un receptor de audio o barra de sonido? Si quiere configurar su control remoto para controlar su equipo de audio o barra de sonido, visite remotes.cox.com.

4 Controle el encendido y el volumen del televisor

Códigos de fabricantes de televisores más comunes

LG

10178, 11265

Panasonic

10051, 10250

Samsung

10812, 10060

Sanyo

10154, 10159

Sony

10000, 11100

Sharp

10093, 10165

Toshiba

10156, 11156

Vizio

11758, 11756

Si su código no está en la lista o le gustaría controlar un equipo de audio, visite remotes.cox.com.

Need help?

Visit remotes.cox.com

WATCH NBC (MIRAR CNBC)

FIND The Voice (BUSCAR The Voice)

SHOW ME all Eagles games (MOSTRARME todos los partidos de los Eagles)

SHOW ME all kids movies on HBO (MOSTRARME todas las películas para niños en HBO)

RECORD The Biggest Loser (GRABAR The Biggest Loser)

KIDSZONE

GUIDE (GUÍA)

WHAT SHOULD I WATCH? (¿QUE PUEDO VER?)

WHAT'S ON NOW? (¿QUÉ HAY PARA VER?)

Keep for future reference, but if you decide to toss, please recycle.